



How to connect the keys

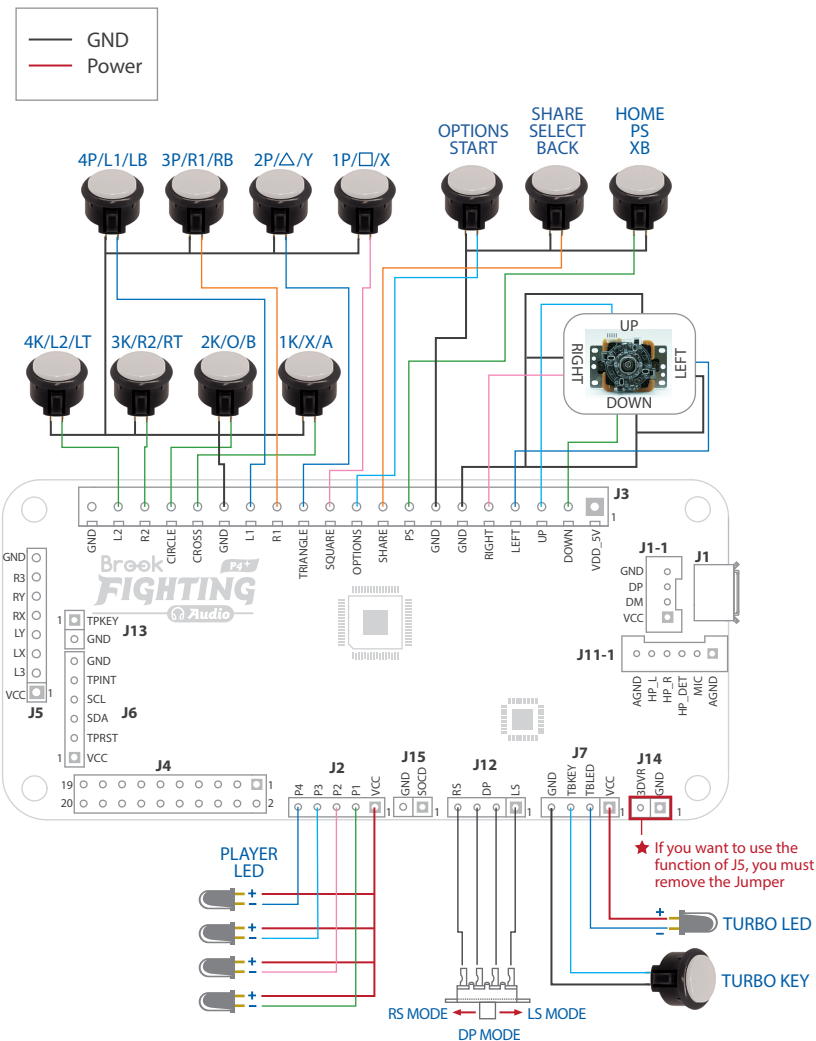


J2 Player LED Guide

	LED ON	LED OFF
Player	PS4	PS3
1P	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4
2P	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4
3P	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4
4P	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4
5P		VCC P1 P2 P3 P4
6P		VCC P1 P2 P3 P4
7P		VCC P1 P2 P3 P4


How to connect the Breakout Board

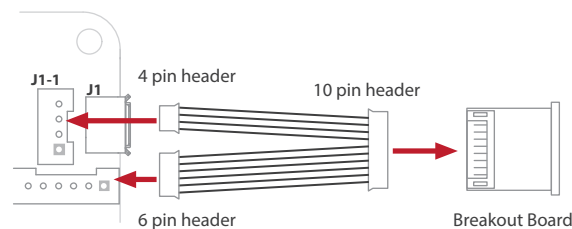


J4 Detail

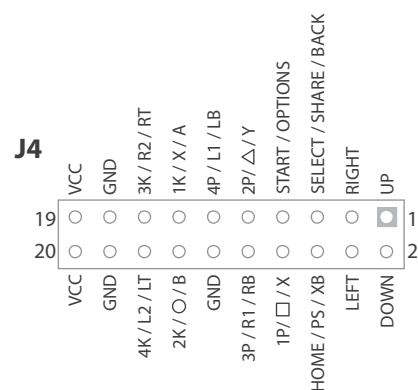


How to connect the Analog Sticks (optional purchase)

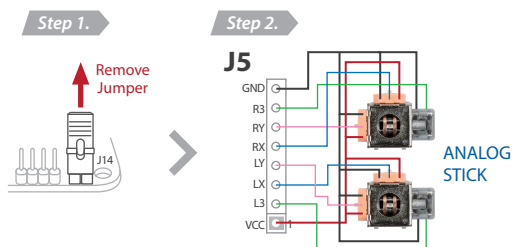

How to connect the Brook Touch Pad (optional purchase)

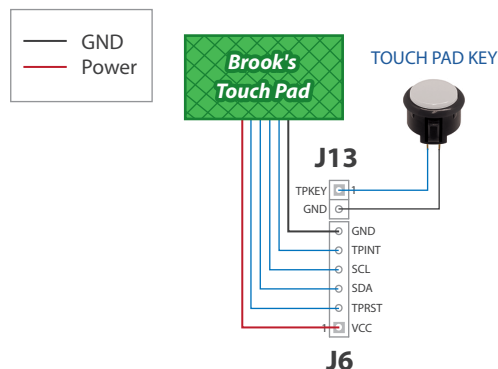


如何連接按鈕

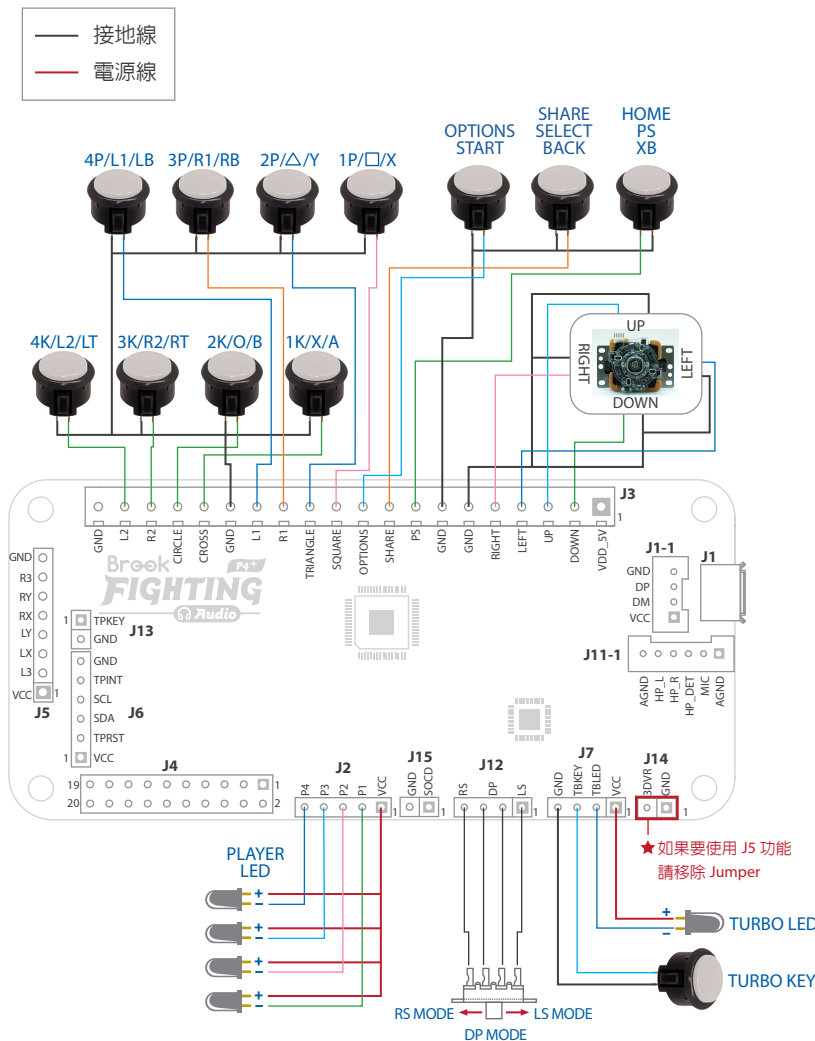


J2 Player LED 連接方式

	LED ON	LED OFF
Player	PS4	PS3
1P	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4
2P	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4
3P	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4
4P	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4
5P		VCC P1 P2 P3 P4
6P		VCC P1 P2 P3 P4
7P		VCC P1 P2 P3 P4


如何連接 Brook 外接板

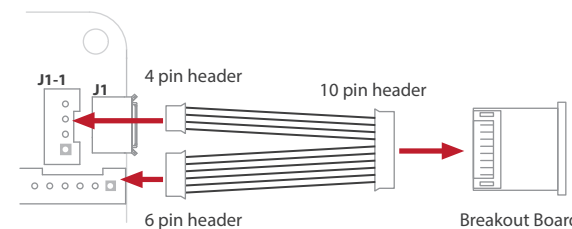


J4 連接方式

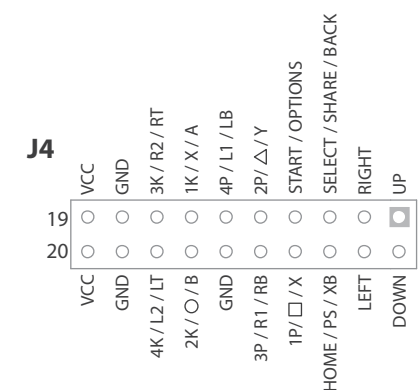

如何連接 Analog Stick (選購)

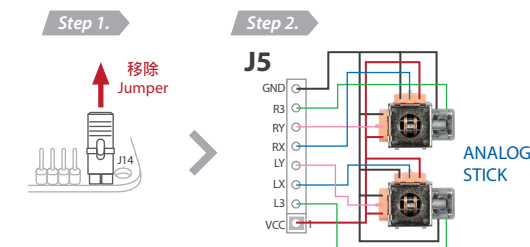

如何連接 Brook 觸控板 (選購)

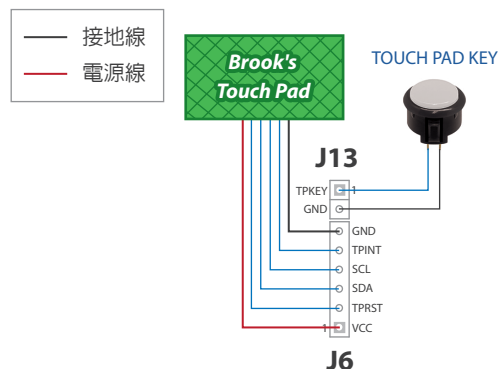




说明书


Brook PS4+ 声音格斗板 连接说明书

如何连接按钮


— 接地线
— 电源线

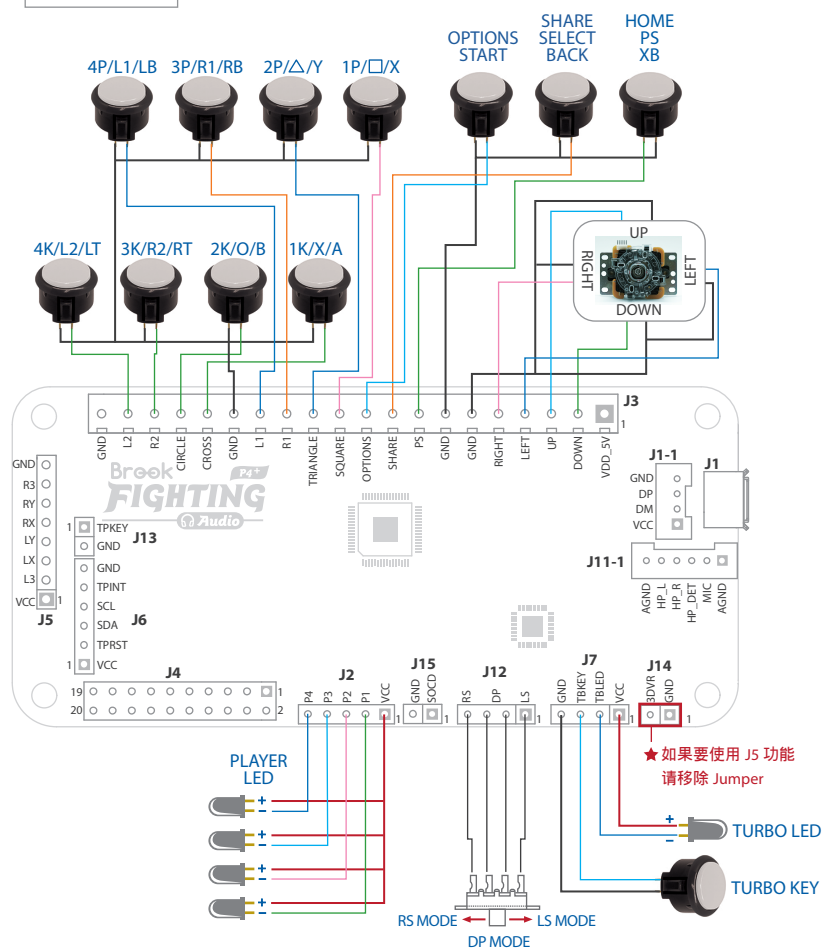

如何连接 Brook 外接板

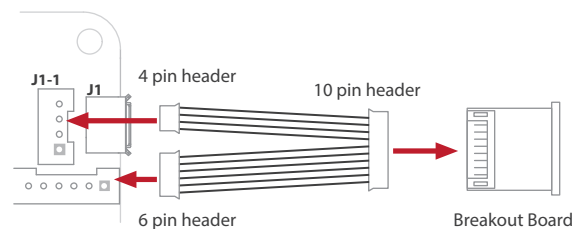


J4 连接方式

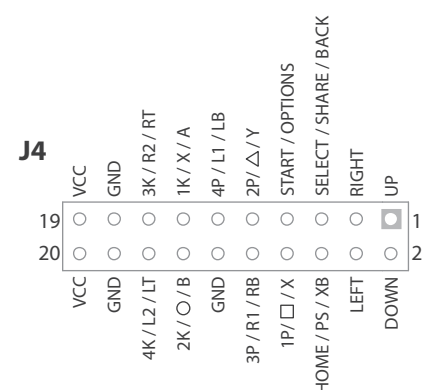


如何连接 Analog Stick

(选购)

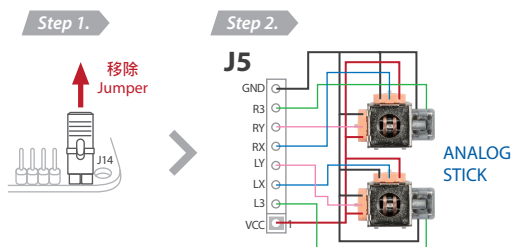

如何连接 Brook 触控板

(选购)

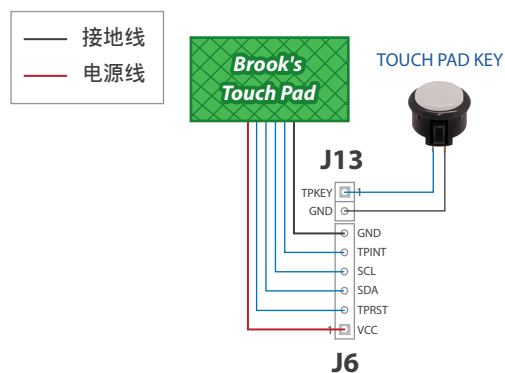

J2 Player LED 连接方式

● LED ON ○ LED OFF

Player	PS4	PS3	XInput
1P	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4
2P	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4
3P	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4
4P	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4	VCC P1 P2 P3 P4
5P		VCC P1 P2 P3 P4	
6P		VCC P1 P2 P3 P4	
7P		VCC P1 P2 P3 P4	

